



## INTRODUCTION

Use this guide to replace your MacBook Air's removable solid-state drive (SSD).

[video: <http://www.youtube.com/watch?v=DLk1AJIzUEM>]



### TOOLS:

- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air](#) (1)
- [T5 Torx Screwdriver](#) (1)



### PARTS:

- [Macbook Air 11" and 13" \(Late 2010/Mid 2011\) SSD](#) (1)  
64 GB
- [Macbook Air 11" and 13" \(Late 2010/Mid 2011\) SSD](#) (1)  
128 GB
- [Macbook Air 11" and 13" \(Late 2010/Mid 2011\) SSD](#) (1)  
256 GB

## Step 1 — Lower Case



- i** Before proceeding, close your computer and lay it on a soft surface top-side down.
- Remove the following ten screws:

  - Two 9 mm 5-point Pentalobe screws
  - Eight 2.6 mm 5-point Pentalobe screws
- i** The special screwdriver needed to remove the eight 5-point Pentalobe screws can be found [here](#).


## Step 2



- Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.
- Remove the lower case and set it aside.



## Step 3 — Battery

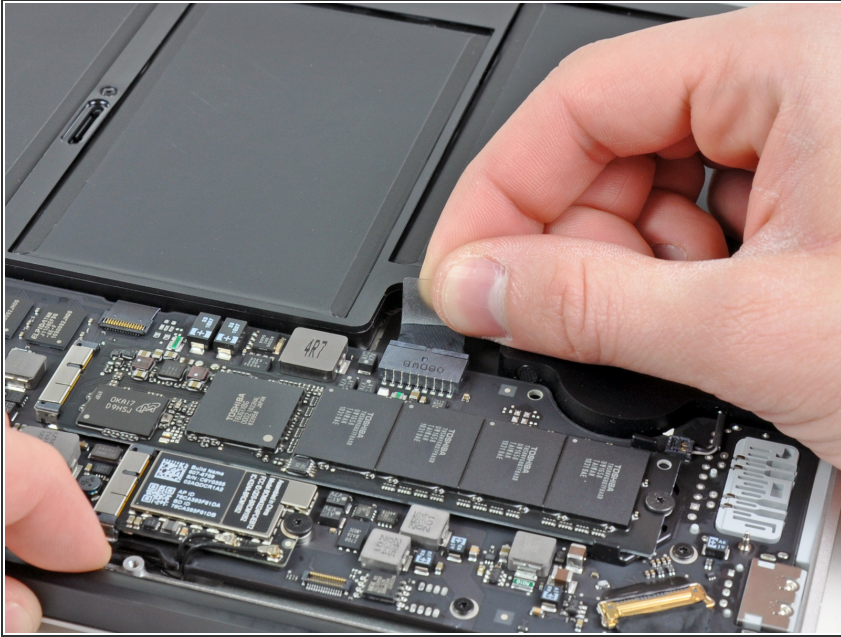


**i** For precautionary purposes, we advise that you disconnect the battery connector from the logic board to avoid any electrical discharge. This step is **optional** and is not required.

- Grab the clear plastic pull tab attached to the battery connector and pull it toward the front edge of the Air to disconnect the battery from the logic board.

**!** Do not lift upward on the connector as you disconnect it.

## Step 4 — Solid-State Drive

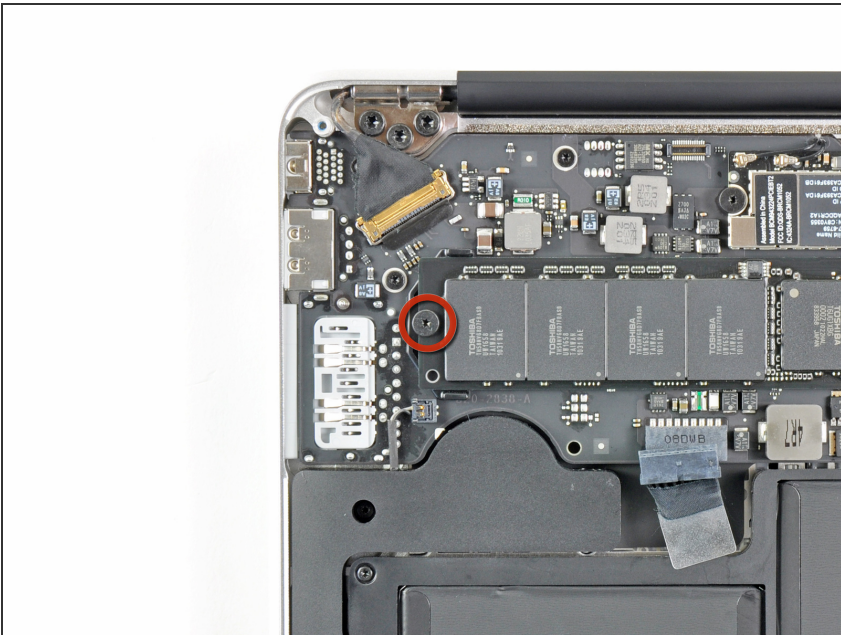

- Remove the single 2.9 mm T5 Torx screw securing the SSD to the logic board.

## Step 5



Do not lift the end of the SSD excessively.

- Slightly lift up the end of the SSD and pull it straight out of its socket on the logic board.
- ★ When reinstalling the SSD, be sure it is properly seated before reinstalling its retaining screw.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 08:52:58 PM.